



Control your property rental time  
remotely, securely, economically, and easily



# eRL-08<sup>®</sup>

## *Rental Property Remote Access Control System*

- Remote Access Controller
- Lock Device

# Quick Setup Guide

-Version 1.0

**[www.eRentalLock.com](http://www.eRentalLock.com)**


## Quick Reference for eRL-08 System Setup

### Step 1 – Insert installer CD in your computer CD/DVD driver

Insert the eRL-08 Remote Access Controller installer CD, which comes with your order, into your computer's CD/DVD driver. The setup program should run automatically. If not, double click the setup.exe file in the CD. The installation steps are self guided.



**Step 2 – Install Microsoft .Net Framework 2.0** (Note: If your computer hasn't installed the Microsoft .NET Framework 2.0 and Windows Installer 3.1, the installer CD will try to install them on your computer as Step 2 to Step 4. Otherwise go to Step 5a directly.)


Click **Accept** to accept to install .NET Framework 2.0.

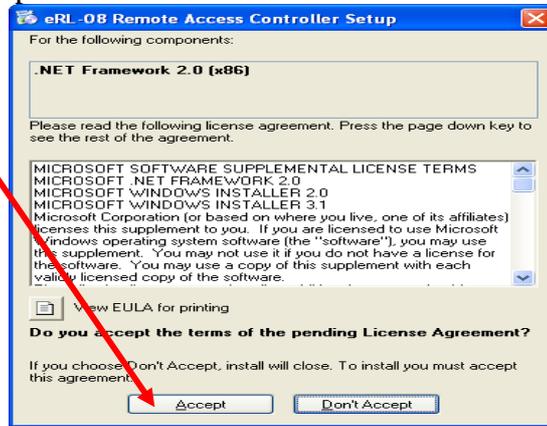

### Step 3 – Install Windows Installer 3.1

Click **Accept** to accept to install Windows Installer 3.1.

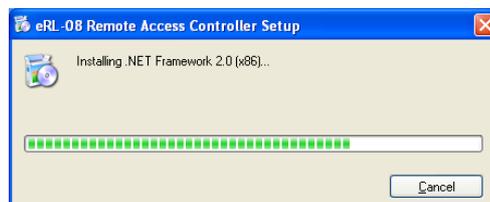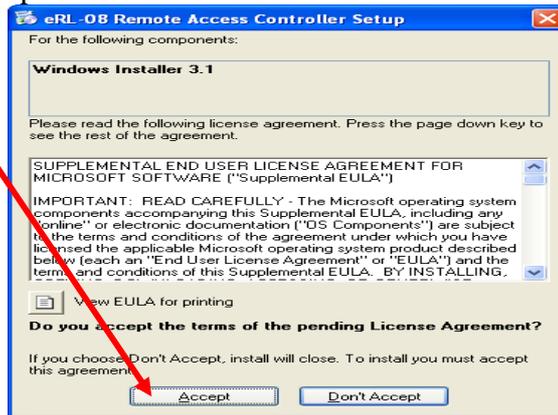

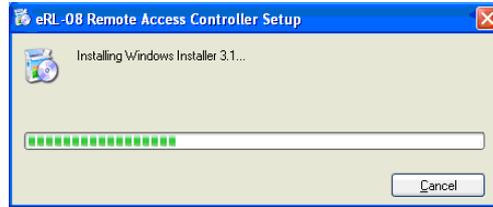

**Step 4 – Reboot your computer**

After installation is finished, you must reboot your computer. Click **Yes** to reboot now.




**Step 5a – Install eRL-08 Remote Access Controller Program**

After reboot the computer, the installer CD will try to install **eRL-08 Remote Access Controller** program on your computer automatically. Click **Next** to continue.




**Step 5b – Read and Accept the End User Agreement**

Read the End User Agreement carefully. If you accept the agreement, click **I Agree**.

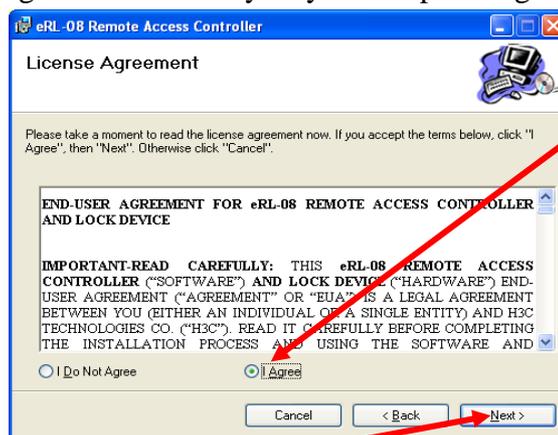


Then click **Next** to continue.


**Step 5c – Select the Program installation folder** (**Note:** *If you want to change the default folder, do not select the folder in C:\Program Files\ directory.*)  
Click **Next** to continue.

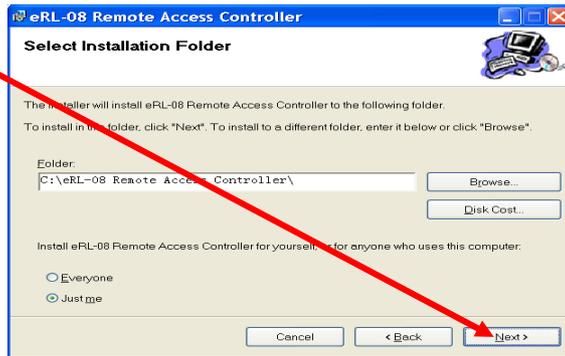

**Step 5d – Confirm the installation**  
Click **Next** to continue.

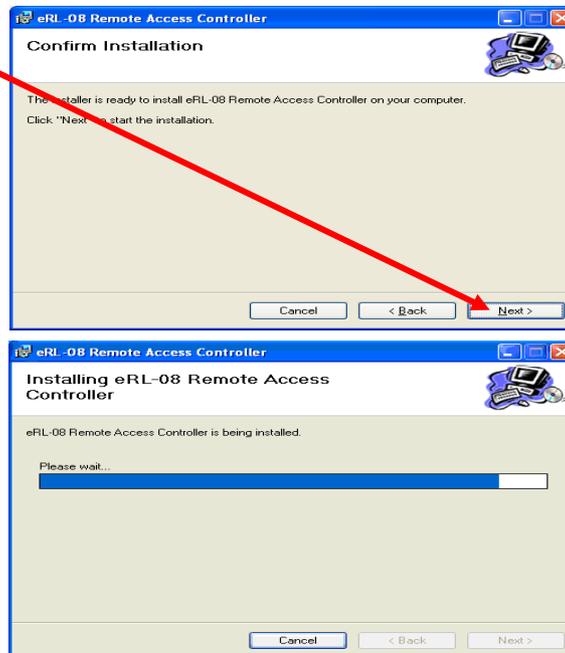

**Step 5e – Complete the installation**  
Click **Close** to complete the installation.

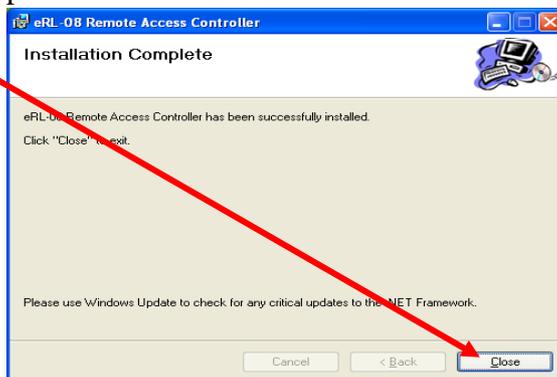


**Step 6 – Start the eRL-08 Remote Access Controller Program**

Double click the icon  on your desktop to start the Program.


**Step 7 – Login the Program**

Input factory default login password 123456 **here**, then click **Login here**.

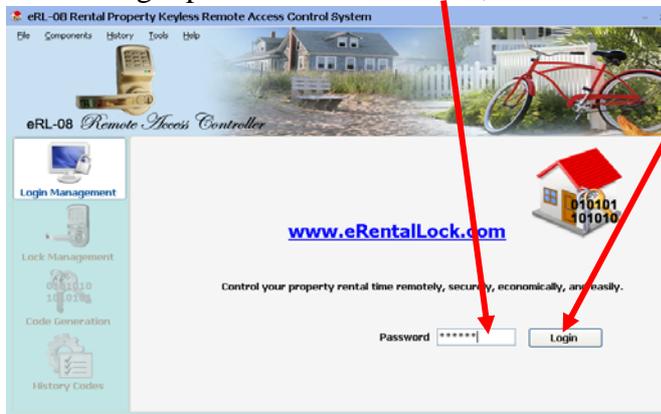


**Step 8a – Change the Login password**

Click **here** to change the factory default login password into your own password.

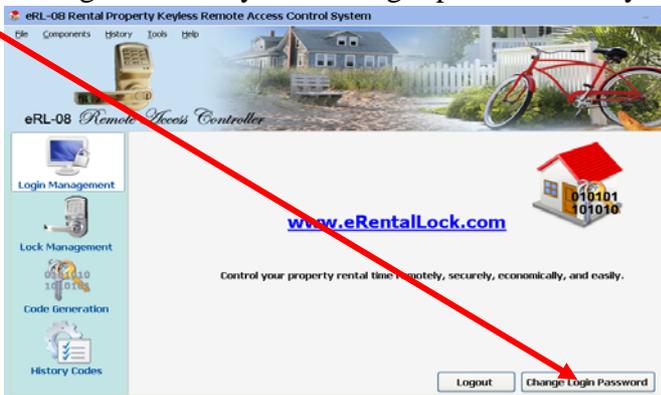

**Step 8b – Change the factory default Login password into your own password**

1. Input 123456 **here**.
2. Input your new password **here**.

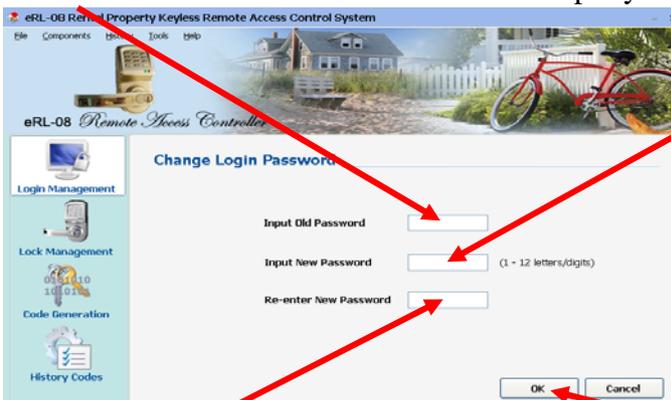


3. Input your new password **here** again.

4. Click **OK**.

**Step 9a – Start to register the new Lock with the Program**


1. Click **Lock Management** icon.

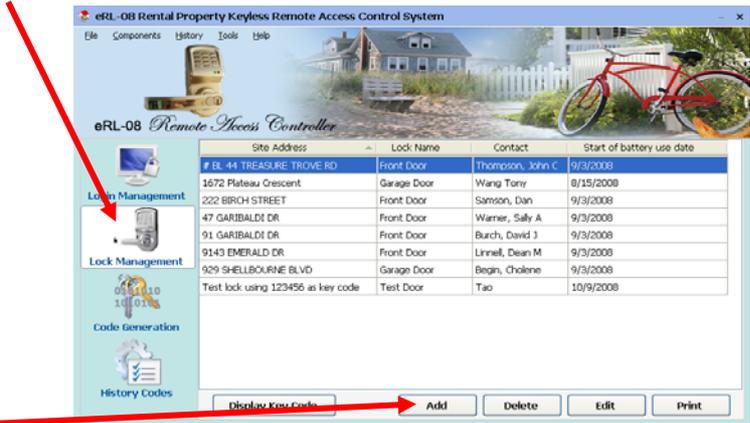

2. Click **Add** to register the new **Lock** with the **Program**.

**Step 9b – Fill in the registration information for the new Lock**


1. Input property address **here**. 2. Input **door name** on which the **Lock** will be installed.

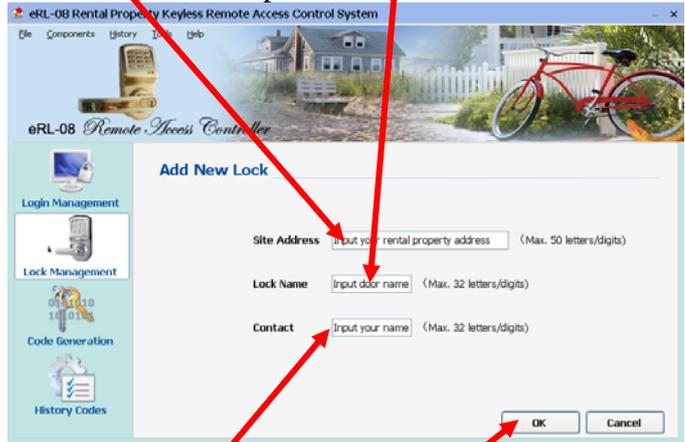

3. Input the contact person name **here**. 4. Click **OK**.

**Step 10 – Display Key Code for the new Lock setup**

1. Click **Display Key Code**.

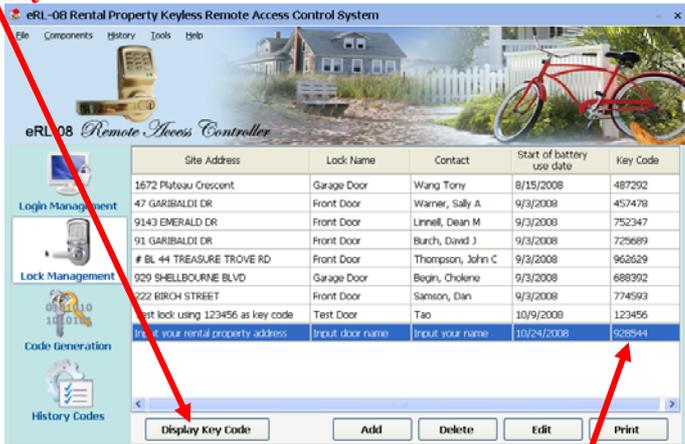

2. Note down or print the **Key Code** for the new **Lock**, e.g. **928544**.

**Step 11 – Install batteries and connect power wire for the new Lock:**

Install **4 AA batteries**, and then connect the **power wire**.



**Step 12 – Set the new private Key Code for the new Lock** (**Note:** *The new Lock default factory private Key Code is 123456.*)

Enter the new private **Key Code** (e.g. **928544**) generated by the **Program** into the new **Lock** as:

**<\* 0 # old private Key Code # new private Key Code # new private Key Code again>.**

E.g. **<\* 0 # 1 2 3 4 5 6 # 9 2 8 5 4 4 # 9 2 8 5 4 4 >.**



**Step 13 – Set date/time for the new Lock**

Set the date/time in the new **Lock** as: **<\* 1 # private Key Code # YYMMDDHHMM >.**

Note:

1. Keeping your convenience in mind, the system is designed to automatically adjust DST (Daylight Saving Time) time, so you don't need to adjust the **Lock** time when the DST time is start and end. If you are in Daylight Saving Time now, the time you set in the **Lock** must be normal time (e.g. if the current time is 14:30, the time you set must be 13:30).
2. The **Lock** time is in 24 hour time format. The date and time **MUST** be entered in two digits

E.g. if the private Key Code is 928544 and the current date/time is July 3, 2008, 5:06PM (DST time), you should set the **Lock** time as

**<\* 1 # 9 2 8 5 4 4 # 08 07 03 16 06 >**

**Congratulation!**  
**Your Lock is ready to use NOW.**

## Quick Reference for Access Code Generation

### Example 1 – Generate an Access Code for a short stay Guest

1. Click **Code Generation** icon.
2. Click **Used for Guest**.
3. Input **Guest Name**.

4. Select **Property Address**.

5. Select **Lock**.

6. Click **Short Term**.

7. Select Check-In **date/time**.
8. Select Check-Out **date/time**.
9. Click **Generate Code**

Dear Cathy

Your access code is **1812309980**

Address: 929 SHELLBOURNE BLVD Start Date: 7/24/2008 12:00

Lock Name: Garage Door End Date: 7/28/2008 12:59

**Instruction:**

Correct operation:  
The lock will beep from low to high notes and flash a green light.

Wrong operation:  
The lock will beep from high to low notes and flash a red light.

Low battery alarm:  
The lock will beep high and low notes alternatively and continuously flash a red light after the lock is correctly opened.


Enter Inactive State:  
The lock will enter inactive state after the 3rd wrong code is entered for 30 seconds. After the inactive time has passed, the next wrong code will make the lock to enter inactive state for another 30 seconds.

Email Print Close

**Email** the Access Code to the Guest, or **Print** it out to Fax or Phone to the Guest.

**Example 2 – Generate an Access Code for a long term Housekeeper**

1. Click **Code Generation** icon. 2. Click **Used for Personnel**. 3. Input **Housekeeper Name**

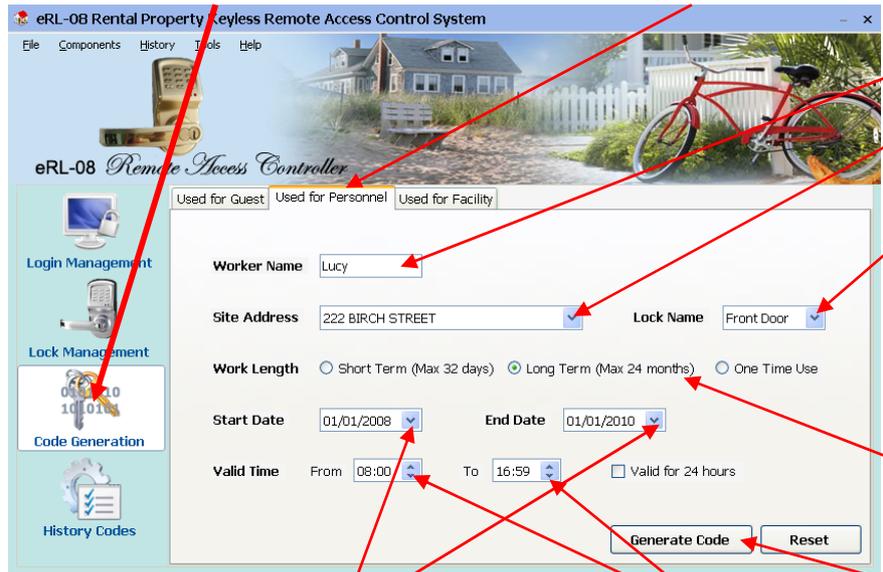


4. Select **Property Address**.

5. Select **Lock**.

6. Click **Short Term**.

7. Select Start/End **work date**. 8. Select daily **work hour**. 9. Click **Generate Code**

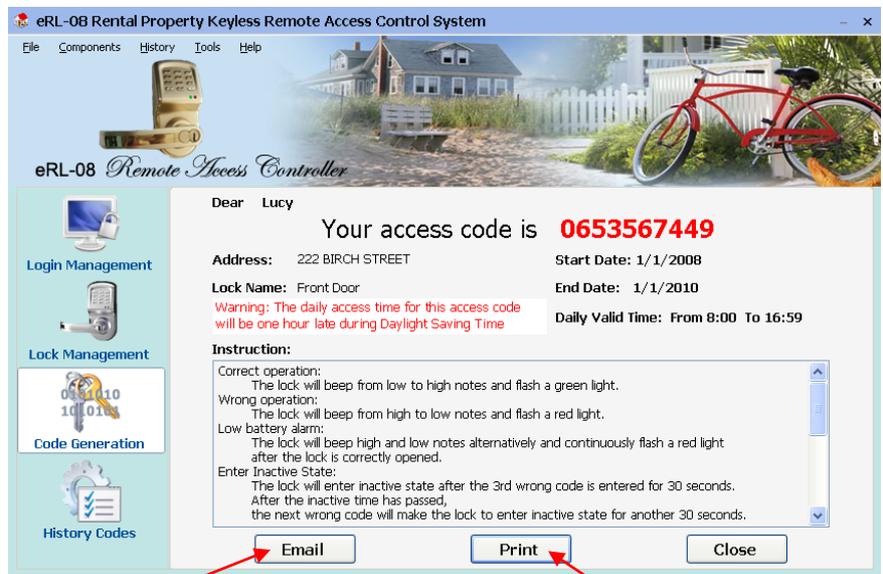

**Email** the Access Code to the housekeeper, or **Print** it out to Fax or Phone to the housekeeper.

## Quick Reference for Lock Operation

<b>Set new private Key Code</b>			
<i>e.g. the old private Key Code is 123456, the new private Key Code is 351430.</i>			
* 0 #	Old private Key Code	#	New private Key Code
			# New private Key Code again
* 0 #	1 2 3 4 5 6	#	3 5 1 4 3 0 # 3 5 1 4 3 0
<b>Set date &amp; time</b>			
<i>e.g. the private Key Code is 351430, the current date/time is February 3, 2008, 3:20PM.</i>			
* 1 #	Private Key Code	#	yy mm dd hh mm
* 1 #	3 5 1 4 3 0	#	08 02 03 15 20
<b>Set group Key Code</b>			
<i>e.g. the private Key Code is 351430, the group Key Code is 754658.</i>			
* 4 #	Private Key Code	#	Group Key Code
			# Group Key Code again
* 4 #	3 5 1 4 3 0	#	7 5 4 6 5 8 # 7 5 4 6 5 8
<b>Initialize Personalized Code and disabled Access Code memory</b>			
<i>e.g. the private Key Code is 351430.</i>			
* 5 #	Private Key Code		#
* 5 #	3 5 1 4 3 0		#
<b>Disable valid Access Code by different Access Code</b>			
<i>e.g. one valid Access Code is 1812309980, the other valid Access Code to be disabled is 0653567449.</i>			
	Valid Access Code	*	Valid Access Code to be disabled
	1 8 1 2 3 0 9 9 8 0	*	0 6 5 3 5 6 7 4 4 9
<b>Disable valid Access Code by private Key Code</b>			
<i>e.g. the private Key Code is 3 5 1 4 3 0, the other valid Access Code to be disabled is 0653567449.</i>			
* 2 #	Private Key Code	#	Valid Access Code to be disabled
* 2 #	3 5 1 4 3 0	#	0 6 5 3 5 6 7 4 4 9
<b>Open the Lock by private Key Code</b>			
<i>e.g. the private Key Code is 3 5 1 4 3 0</i>			
* 3 #	Key Code		#
* 3 #	3 5 1 4 3 0		#
<b>Open the Lock by 10-digit Access Code</b>			
<i>e.g. the 10-digit Access Code is 1812309980.</i>			
	valid 10-digit Access Code		
	1 8 1 2 3 0 9 9 8 0		
<b>Create your own 3-6 digit Personalized Code</b>			
<i>e.g. the 10-digit Access Code is 1812309980, the Personalized Code you want to create is 28486.</i>			
	10-digit Access Code	#	Your own Personalized Code
	1 8 1 2 3 0 9 9 8 0	#	2 8 4 8 6 #
<b>Open the Lock by your own Personalized Code</b>			
<i>e.g. your Personalized Code is 28486.</i>			
	Personalized Code		#
	2 8 4 8 6		#