



## Remotely Control Access to Your Rental Properties



[www.eRentalLock.com](http://www.eRentalLock.com)


Vancouver, BC, Canada  
[www.eRentalLock.com](http://www.eRentalLock.com)



## Remotely Control Access to Your Rental Properties

### Replace electronic board for FE595


#### Step 1 – Remove the front cover

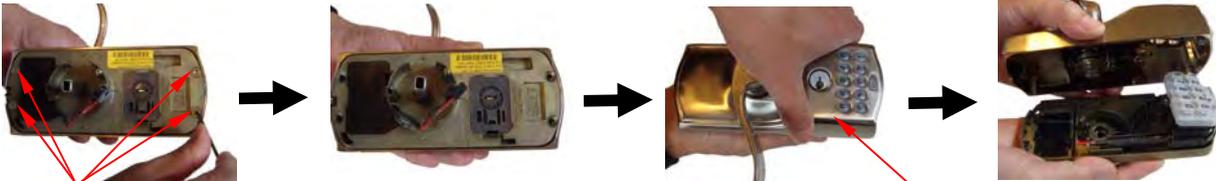

Remove the 4 screws using T15 Torx screwdriver

Remove the front cover

#### Step 2 – Remove the rubber keypad

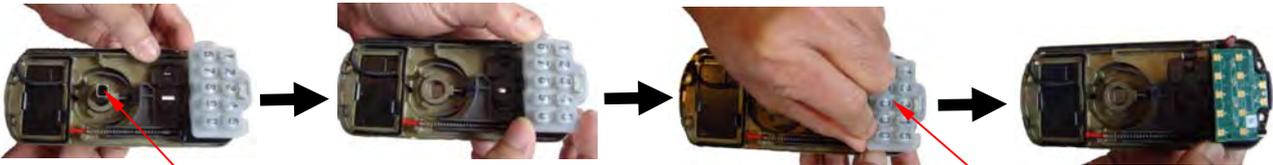

Remove the transmission shaft

Remove the rubber keypad

#### Step 3 – Replace the old board with the new board



Disconnect the two connectors from old board  
**Note: Please hold the connector, NOT wires to disconnect!**

Connect the two connectors with new board


#### Step 4 – Put back the rubber keypad



Put back the rubber keypad

Put back the transmission shaft

#### Step 5 – Put back the front cover

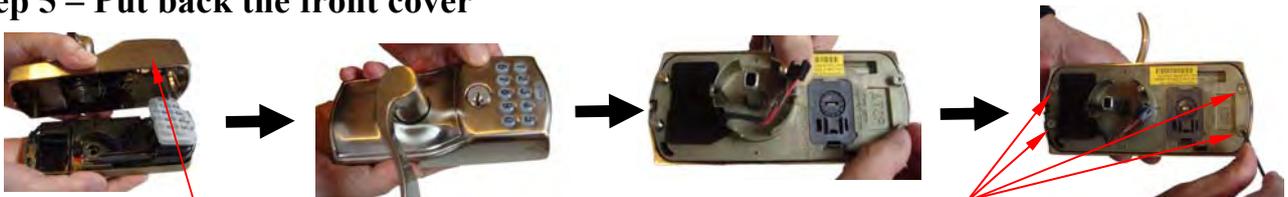

Put back the front cover

Secure the 4 screws

[www.eRentalLock.com](http://www.eRentalLock.com)

Vancouver, BC, Canada  
[www.eRentalLock.com](http://www.eRentalLock.com)